IMI CORNELIUS INC ■ One Cornelius Place ■ Anoka, MN 55303-6234

Telephone (800) 238-3600 Facsimile (612) 422-3246

INSTALLATION INSTRUCTIONS

ED150 "K" STYLE LID KITS, P/N 629083204 AND 629083202

These "K" style kits apply to the following ice maker:

Ice Maker	Width
Manitowoc Q320/420	22″

Table 1. Loose-Shipped Parts

Item No.	Part No.	Name	Qty.
1	52994 52934	Cover, Gray (629083202) Cover, Black (629083204)	1
2	620027505	DF150 Ice Maker Lid Assembly	1
3	620027306	Bracket	2
4	70217	#8 Screw	6
5	50904	RTV	1
6	90221	Label	1
7	620909401	Installation Instruction	1
8	620701902	Acorn Nut, 8–32 Nylon	2
9	620701901	Sealing Washer	2
10	620037007	Baffle, Ice DF/ED150	1
11	621701903	#8 Nylon Washer	2

1. Unpack kit.
2. Insert a baffle assembly into the adapter lid.
3. Place (2) sealing washers (item 9) over studs and (2) flat washers (item11), then fasten in place with (2) plastic acorn nuts (item 8).
4. Set ice maker lid on the top of the dispenser.
5. Using the slotted holes in the lid as a template, drill four (4) 9/64″ diameter holes at the bottom of the slots (see detail A). Use extreme care not to drill into the hopper. Fasten the lid to the dispenser with four (4) #8 sheet metal screws, two on each side.
6. Seal the ice maker to the top of the dispenser as follows:

   A. Run beads of RTV around the opening in the lid and inside of the perimeter of the ice maker outline so that the ice maker will set on the RTV.

620909401
Revised: September 8, 1998
March 1998
Rev B

B. Set the ice maker onto the lid and position it as required.

C. Wipe away the excess RTV.

7. Remove the two rear screws (only) installed in step 5. Use those screws to install the mounting brackets (item3). Drill 9/64″ diameter holes into the ice maker cabinet using the bracket as a template. Use extreme care not to drill into any ice maker components (condenser, tubing, etc.). Secure the brackets using the screws provided

8. Follow the ice maker manufacturers instruction to complete the installation of the ice maker including the bin thermostat if so equipped or required.

9. If the plastice acorn nuts interfere with the positioning of the plastic manual fill cover, it may be necessary to make small notches in the back flange of the cover to clear the acorn nuts.

NOTE: Bin Thermostat must not interfere with the agitator rotation.

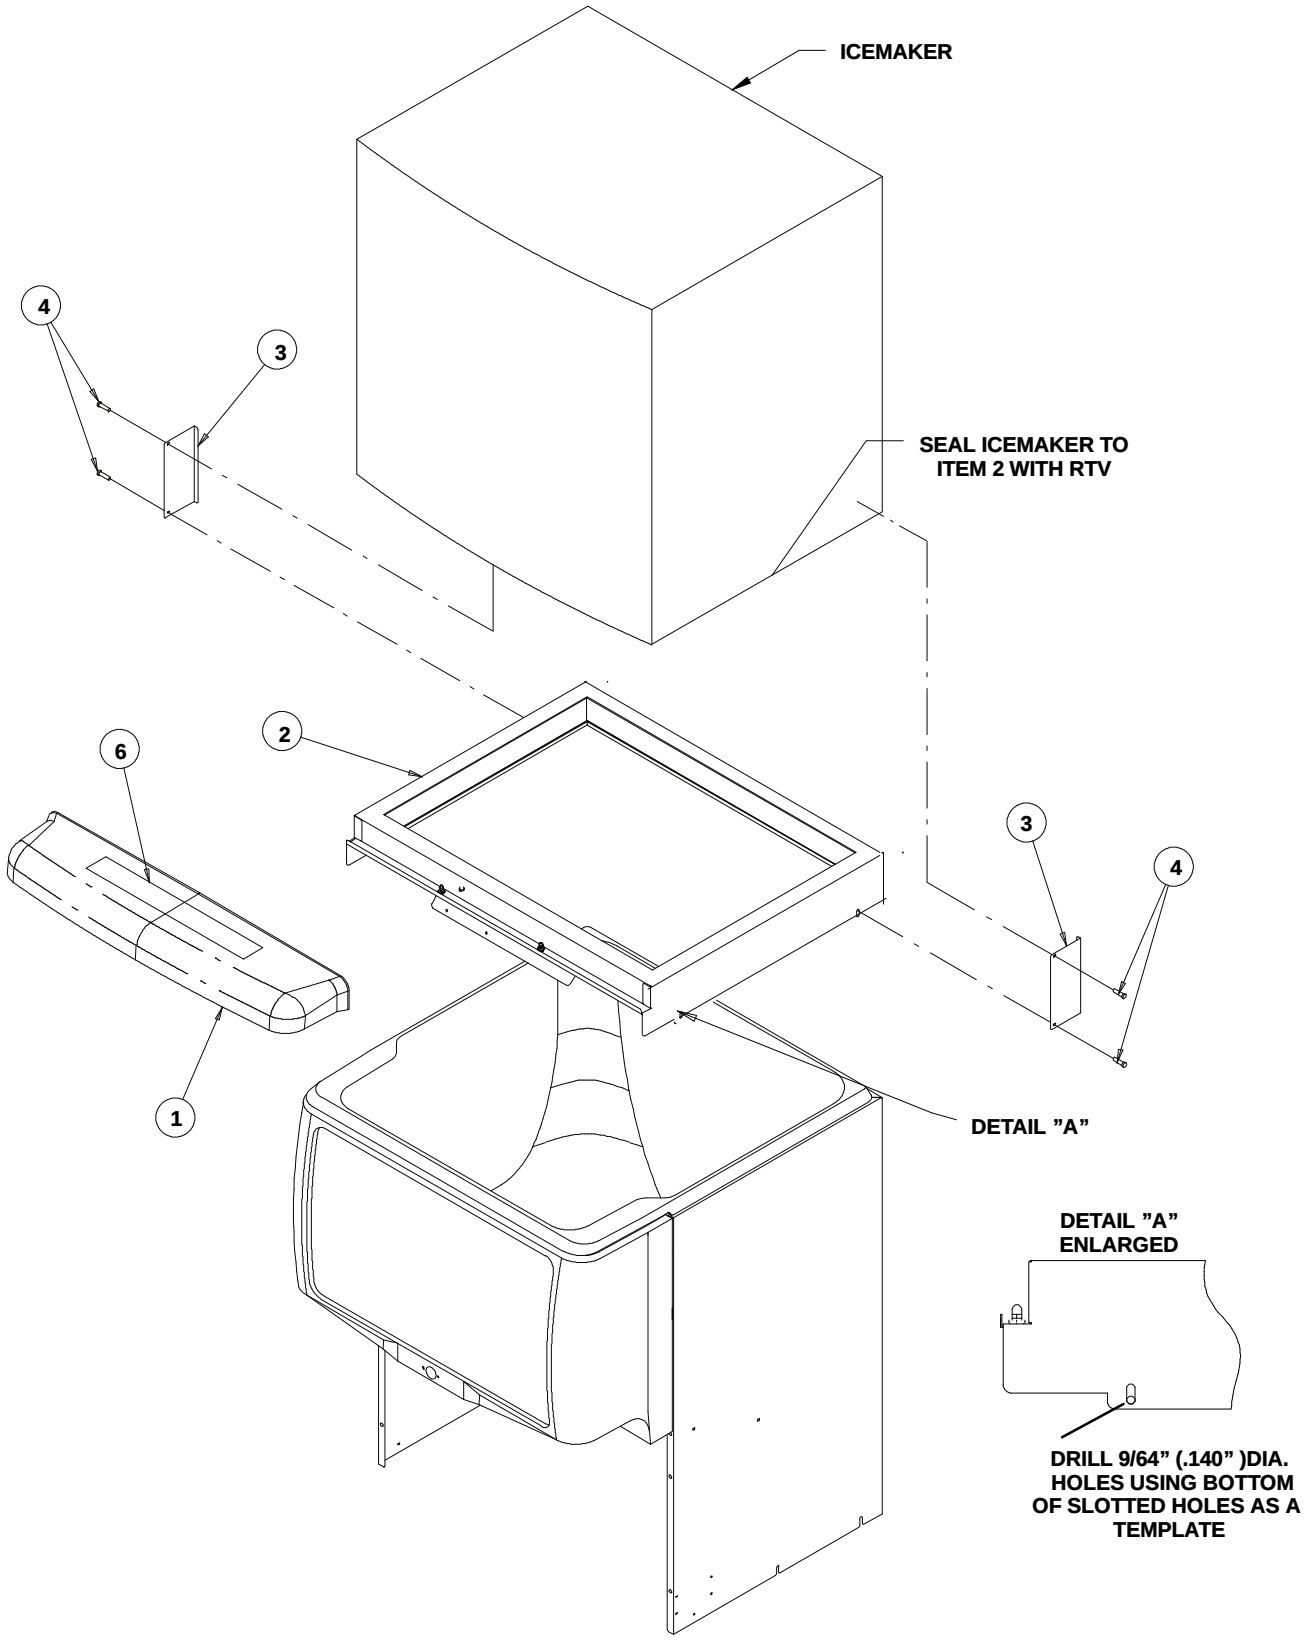

FIGURE 1. DISPENSER ASSEMBLY

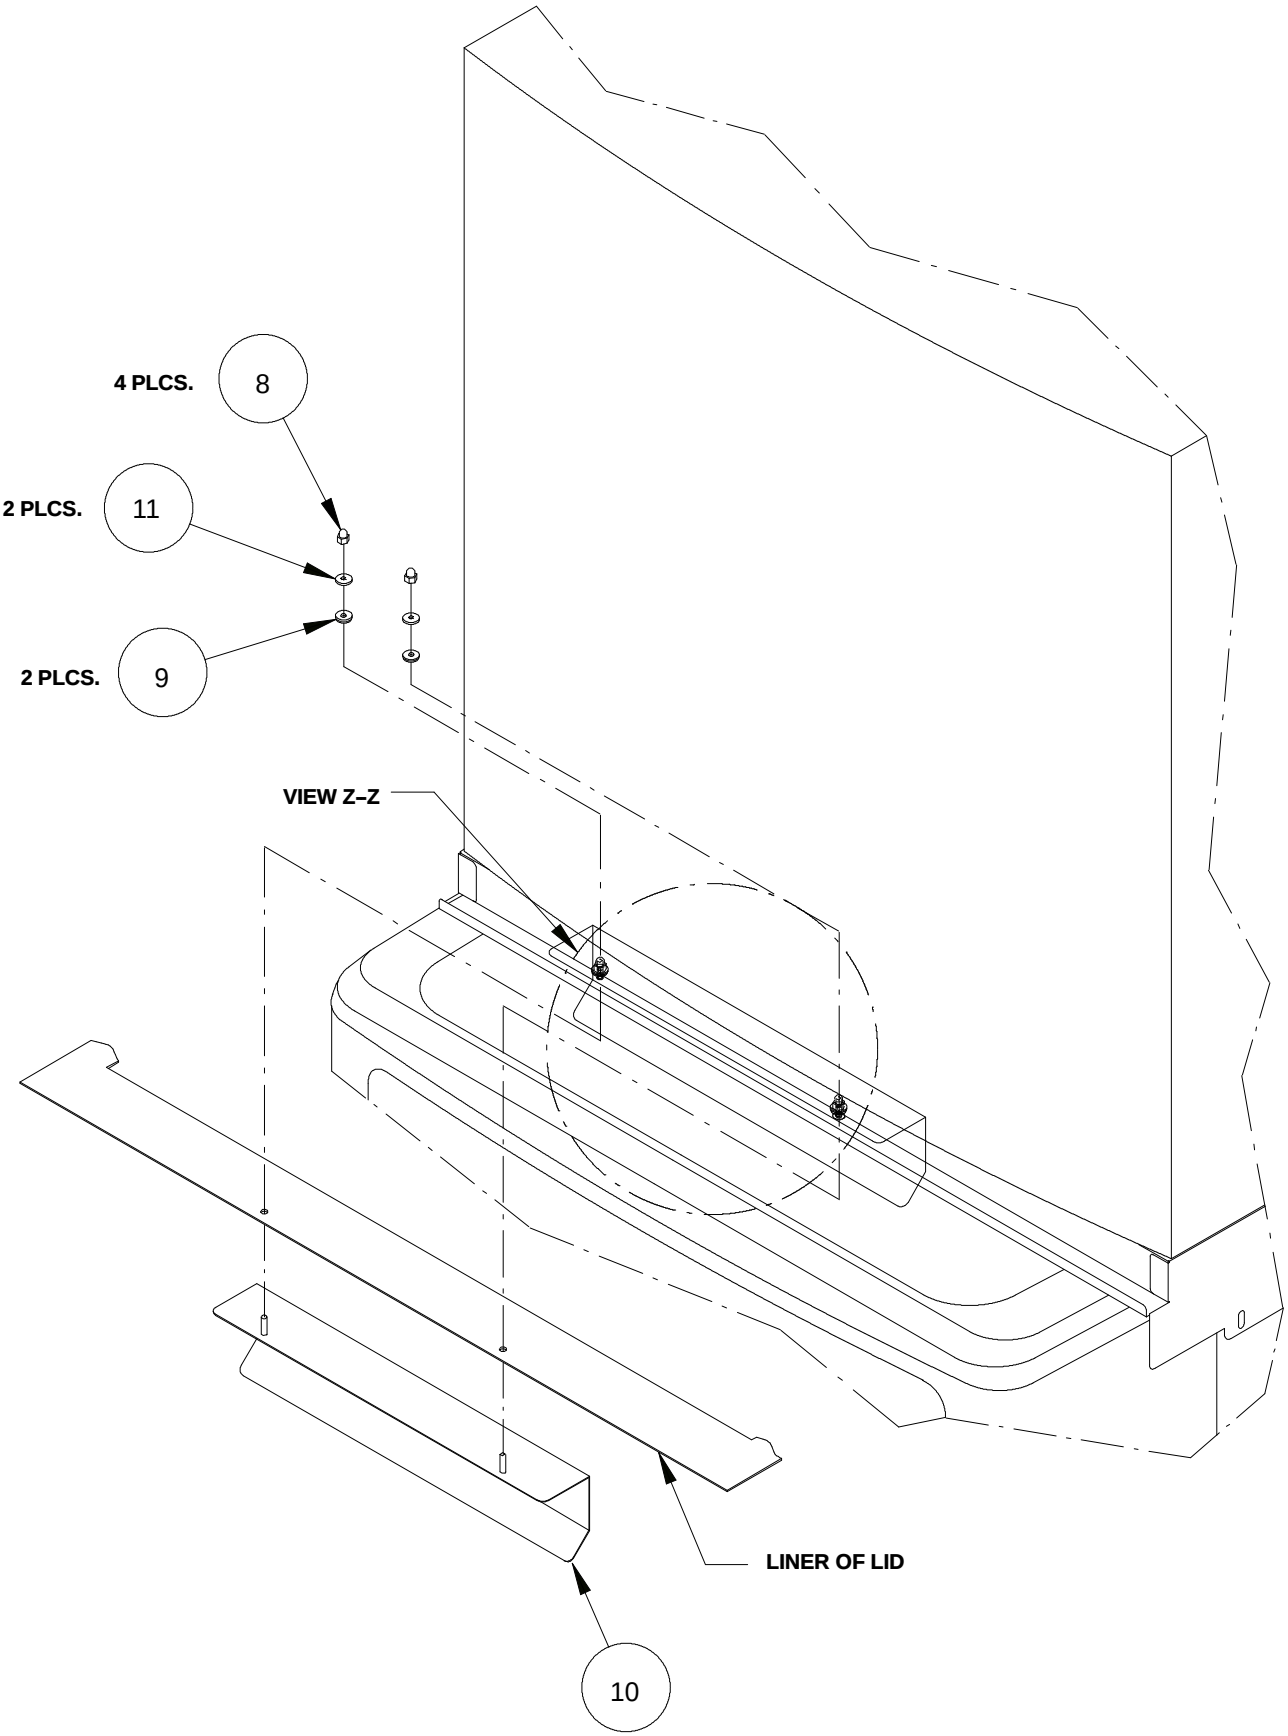

FIGURE 2. ED150 KIT

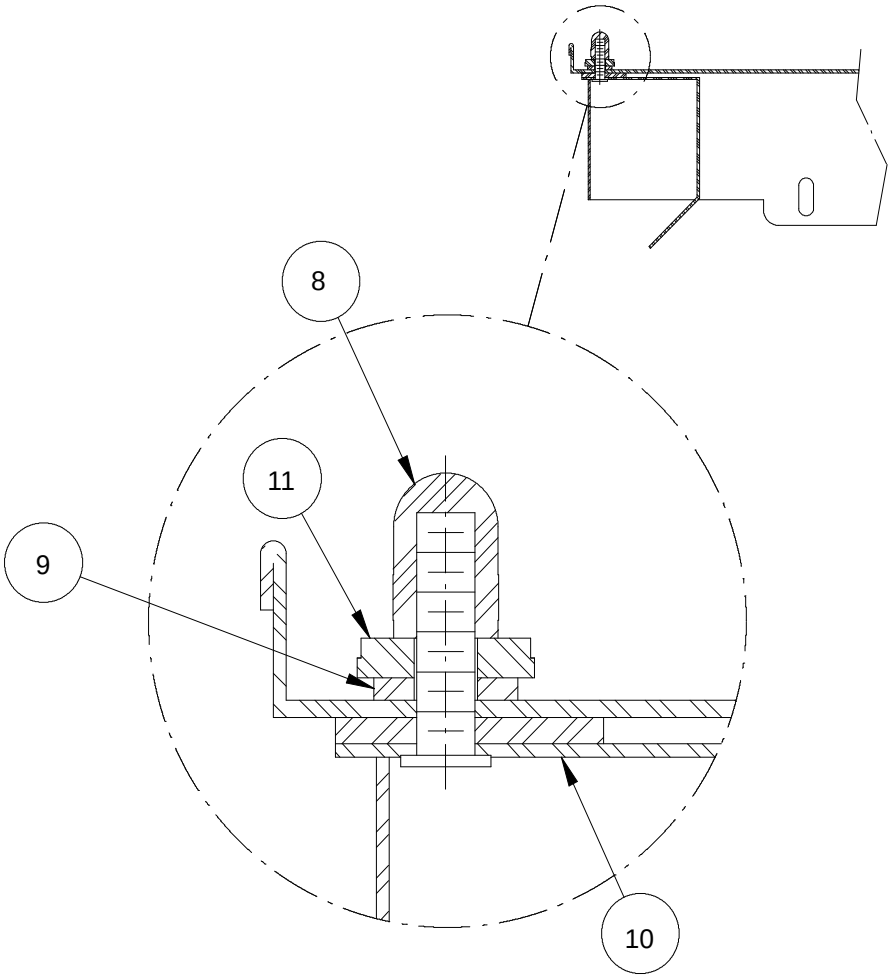

VIEW Z–Z

FIGURE 3. ED150 KIT